


Time's Ticking

Written By: Guus

SUMMARY

This homemade alarm clock looks like the quintessential movie time bomb.

Step 1 — Time's Ticking

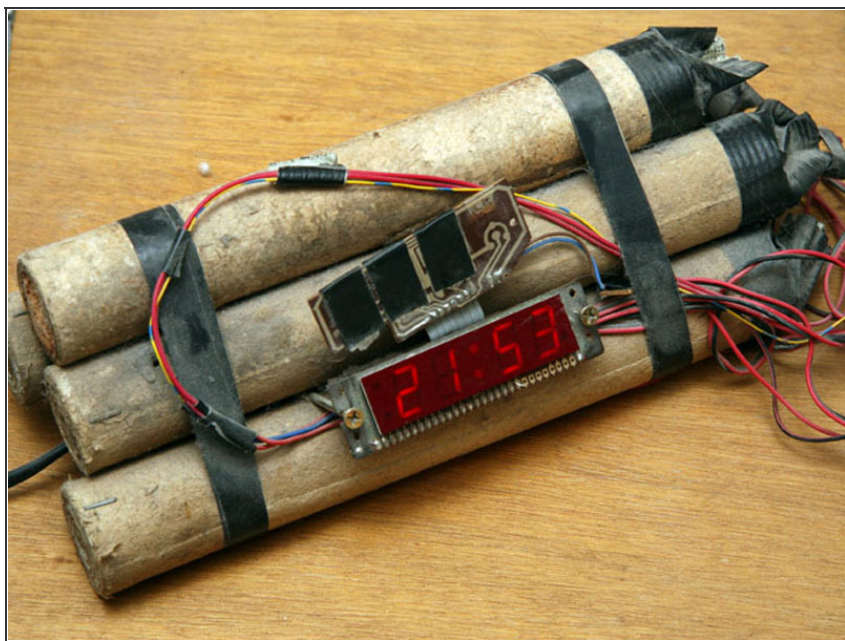

- Take an old alarm clock apart.
- The TNT sticks are just cardboard tubes. I put them outside in the rain for a few days so they got an authentic look.
- Extend the display wiring.
- Put the AC adaptor underneath the cardboard tubes.

This document was last generated on 2012-10-31 07:40:06 AM.